



PRO STEEL REGULATION HOCKEY NET

72 in. / 1,82 m

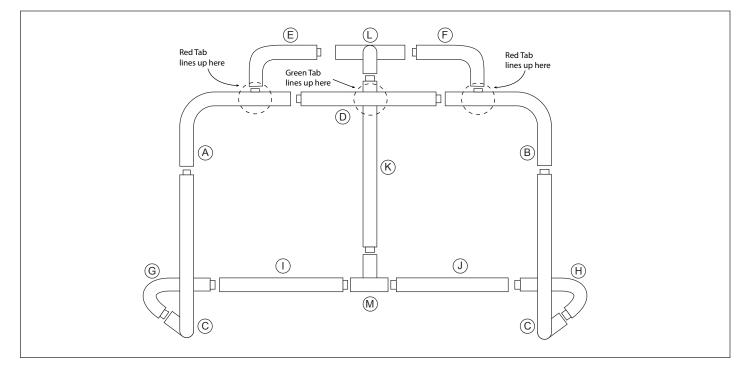


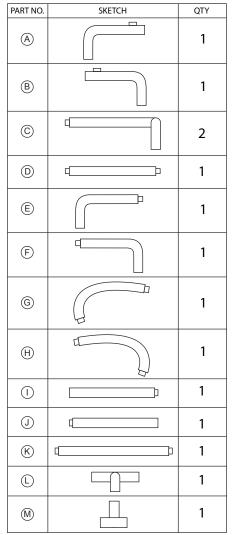

1. Remove all parts from packaging and carefully remove pipe plugs without damaging the pipe openings.

- 2. Begin by gathering parts (A)-(M).
- 3. Ensure you have enough room to begin the assembly (10 ft x 5 ft)
- 4. Begin the assembly from the base and work your way to the top.
- 5. Refer to diagram for instruction
- (*Note: Connections may fit snug so if necessary use a rubber mallet)


Attaching the QuikNet Mesh




*Note: The QuikNet mesh has 3 coloured tabs. The two red tabs line up with the front post at parts (E) and (F) and the green tabs sits at the midpoint of part (D)


1. Gather part (N)

2. Begin fastening the netting to the goal using the Velcro straps at the top of the goal and continue all the way around the net. (Refer to diagram below for Velcro procedure)



(i) Open Velcro tab





(ii) Slip tab through (iii) Close "Roadez" wire weld

(iii) Close Velcro tab